


Fig. 3 - COMPLETING ARCADE FRONT

There are enough pillars to make either 2 separate arcade fronts that can span the shop fronts, or 1 large front that will span a joined shop front kit.

If you want a full length arcade then carefully glue the roof sections together on a flat surface and glue a centre pillar into place to add support.

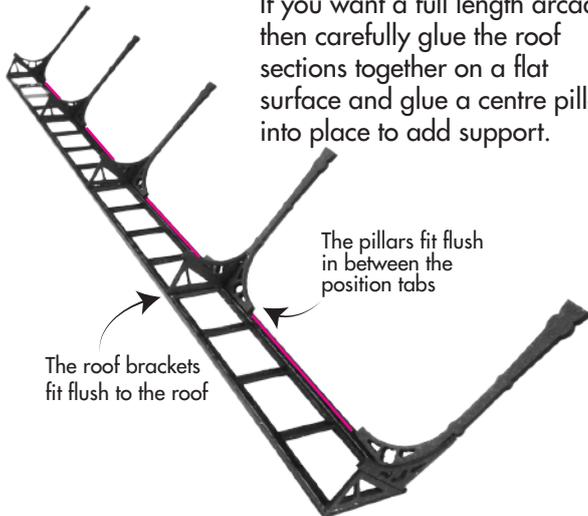

The centre pillars slot neatly in between the position tabs on the underside of the roof section (the glazed side) and the end pillars flush to each end.

PO572 ARCADE FRONT

INSTRUCTION SHEET 1

READ THROUGH ALL THE INSTRUCTIONS BEFORE YOU START.

To construct this kit you will need the following:

1. A Modellers knife.
2. A steel ruler.
3. Glue - UHU Clear Adhesive is our favourite.
4. A cutting surface - a sheet of card or a cutting mat.
5. Fine point tweezers to hold the smaller components.
6. METCALFE UltraFine Tip Glue Bottle (Code: MT907)
7. PO272 or PO273 - this is an enhancement kit designed to go alongside either of these kits.

GETTING STARTED

1 EXTRACTING COMPONENTS FROM SHEETS.

CAUTION: The components are delicate take great care when removing them from the base sheet.

To stop the components from falling off the sheets, they are held secure with small score points.

To release them simply run the point of your knife along the scorelines and they will come seamlessly away.


Then very carefully push out the components.

CHECK LIST

This kit pack should contain the following:

- 1 x BLACK SHEET - Kit components.
- 1 x CLEAR GLAZING - clear plastic sheet
- 2 x INSTRUCTION SHEETS

2 MAKE YOUR 'BUILDERS YARD'.

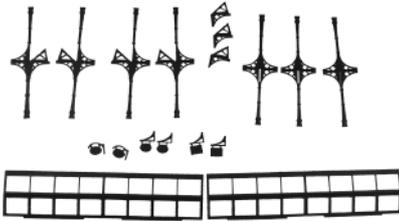


This is an area, a tray or thick piece of card, kept away from your working surface. Store ALL components extracted from the base sheet until needed.

Fig. 1 - THE ROOF SECTION

Fold and glue the roof section over and back onto itself, make sure the score line is deep enough and it folds easily.


Cut a 12mm by 130mm strip from the clear plastic window from the box packaging. Fix this to the underside of the roof. This is the side with the position tabs and the wider mullions. (mullions are the slender vertical supports between the window panes)

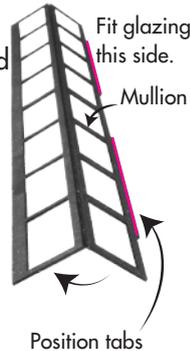

© Copyright 2014.

Fig. 2 - SUPPORT PILLARS

There are 2 different types of pillar, centre pillars and end pillars. Both need to be folded back and fixed onto themselves to become double thickness. Again making sure the scoreline is deep enough to fold easily.

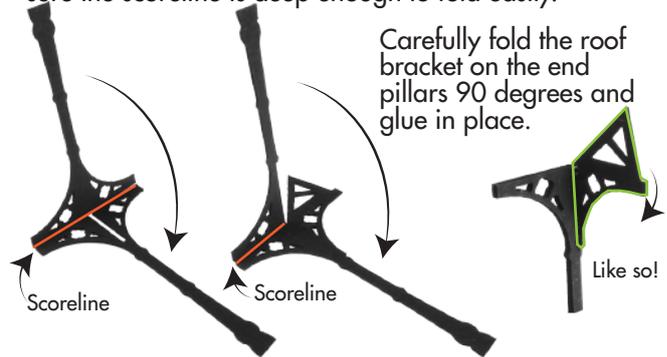

Carefully fold the roof bracket on the end pillars 90 degrees and glue in place.

There are 3 separate roof brackets that slot into position within the groove (marked in orange) on the centre pillars. Carefully glue these into place keeping the bracket at a 90 degree angle from the pillar.



Metcalfe Models and Toys Ltd. Bell Busk, Skipton, N. Yorkshire, BD23 4DU.

PO572 ARCADE FRONT

INSTRUCTION SHEET 2

Fig. 4 - SIGNS

Also included (on this sheet, fig. 6) are a selection of signs in different styles and shapes that match up with the shop fronts in kits PO272/3. Carefully cut out the required signs and glue to a matching sign and glue to the shop fronts. I strongly recommend doing this before fixing the arcade front into place.



Fig. 5 - FINISHING TOUCHES

Once you have all of your signs glued into place. The arcade front, once fully set, can be glued into position. This aligns snugly against the signs and flush to the building edge and top stones above the signs.

