


Fig. 3 - MAIN WALL SECTIONS

Now wrap the walls around the inner roof section, with the walls fitting snugly into the step and flush with the outer roof. This will leave an open section for the door.

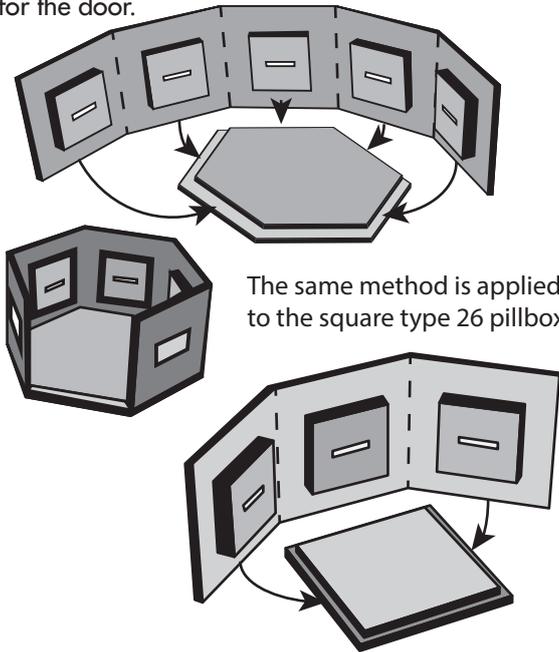

The same method is applied to the square type 26 pillbox.

PO520 Pillboxes Type 22 & 26

CHECK LIST

This kit pack contains the following:

- 1 x Grey Sheet
- 1 x Instruction Sheet 1
- 1 x Instruction Sheet 2

Instruction Sheet 1

**READ THROUGH ALL THE INSTRUCTIONS
BEFORE YOU START.**

To construct this kit you will need the following:

1. A Modellers knife.
2. A steel ruler.
3. Glue - UHU Clear Adhesive is our favourite.
4. A cutting surface - a sheet of card or a cutting mat.
5. Fine point tweezers to hold the smaller components.
6. Metcalfe UltraFine Tip Glue Bottle (Code: MT907)

GETTING STARTED

1 EXTRACTING COMPONENTS FROM SHEETS.

To stop the components from falling off the sheets, they are held secure with small score points.

To release them simply run the point of your knife along the cut lines and they will come seamlessly away.

Store the released components in a separate 'Builders Yard'. This is an area kept away from your working surface, keep the components here until needed. Use a tray or thick piece of card to make your builders yard.

Fig. 1 - PILLBOX ROOFS

Start off by gluing the smaller inner roof section to the larger outer roof section. There is an etched guideline on the larger section to help you centre the smaller section, leaving an even 1mm step all around.


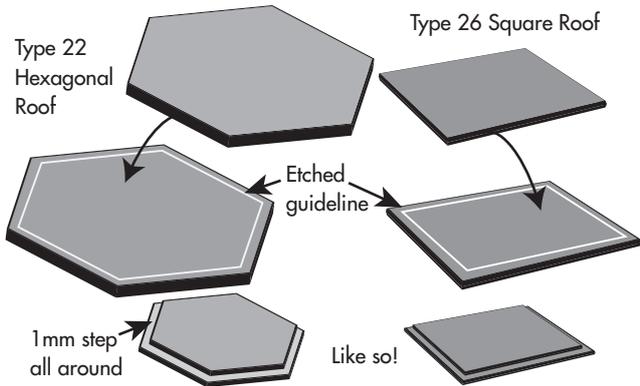


Fig. 2 - EMBRASURES


For both pillboxes there are 2 small embrasures to glue together to create the stepped effect. These need to be affixed together before adding to the main wall sections.

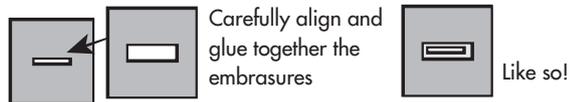

© Copyright 2014.

Fig. 2 - EMBRASURES cont.

After you have glued together the embrasures (5 sets for the type 22 pillbox - 3 for the type 26) carefully line up the embrasure to the inside of the larger wall embrasures. Make sure the narrowest embrasure is facing the inside.

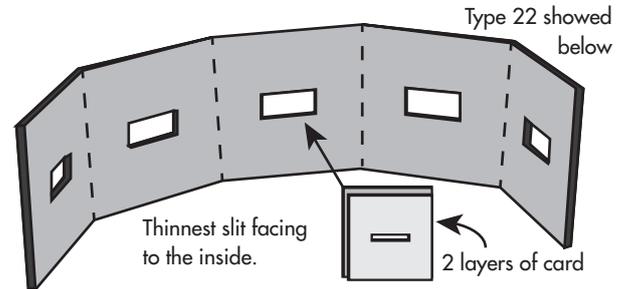


You will finish with a 3 stepped embrasure as viewed from the outside.



Metcalf Models and Toys Ltd. Bell Busk, Skipton, N. Yorkshire, BD23 4DU.

Fig. 4 -DOORWAY cont.

Finally glue into place the doorway. This slots snugly into the gap left by the walls and finishes flush against the roof and side walls.

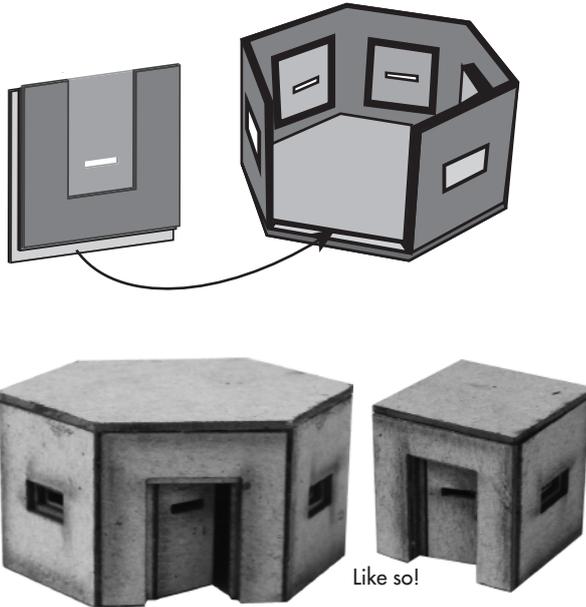

Like so!


© Copyright 2014.

Metcalfe Models and Toys Ltd. Bell Busk, Skipton, N. Yorkshire, BD23 4DU.

PO520 Pillboxes Instruction Sheet 2

Fig. 4 - DOORWAY

Time to build the door frame. Start off with the door, then line up the door frame that is the exact same size as the door. Align and glue into place. Then add the slightly larger frame to the others. Keep the frames all flush to the base of the door.

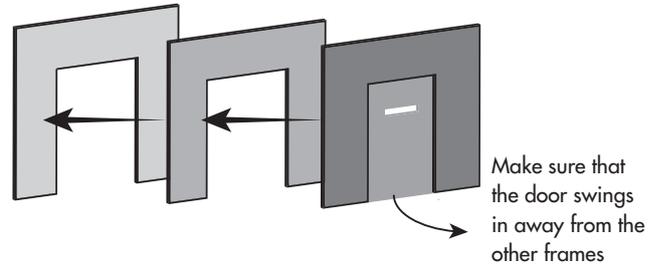

Once aligned you will have an even step around the sides and top of the doorway.

All 3 door frames flush at the base.

