


PO259 EXTRA BITS SHEET CHIMNEY POTS


Cut into strips the chimney pots, then roll tightly around a nail or rod approximately 4mm in diameter

Then unroll the end enough to smear with a little glue, then roll back up and hold tight until set. To finish dab a little paint on top of the pot.

Please Note: once you have perfected the art of rolling your own chimney pots you will soon realise that they are extremely realistic and finish the model nicely. So please be patient and keep trying, the chimney pots do make all the difference. You can download more chimney pot sheets from our website: www.metcalfe-models.com - navigate to this product and click the downloads tab. There will be a pdf you can download and print.

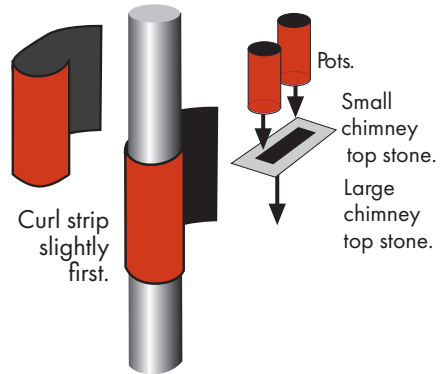

CURTAINS

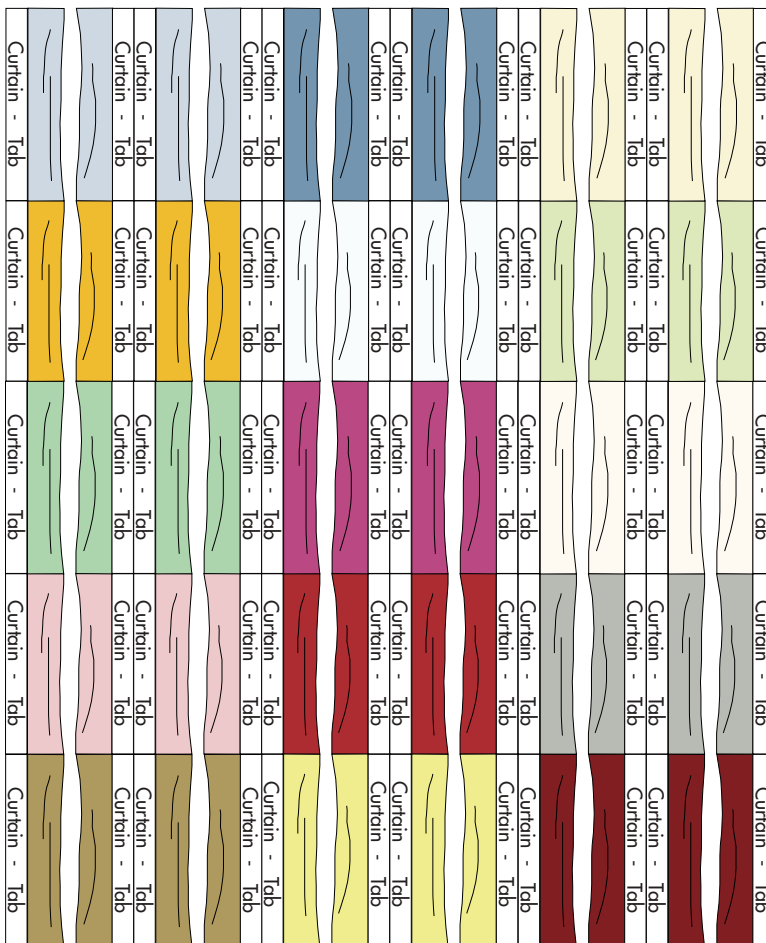

CHIMNEY POTS

