

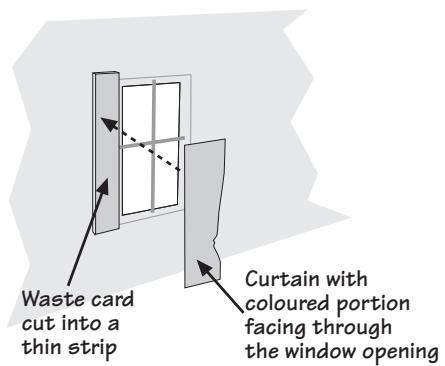


N Scale curtains & chimney pots


To fit curtains fix a small strip of waste card to each side of the window, then glue the curtain to the waste card so that it shows through the window (the waste card will space the curtain back from the window a little giving a greater effect of depth).

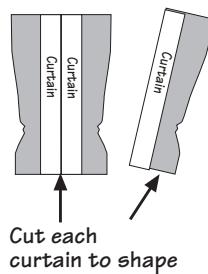


Curtains for inside the windows.

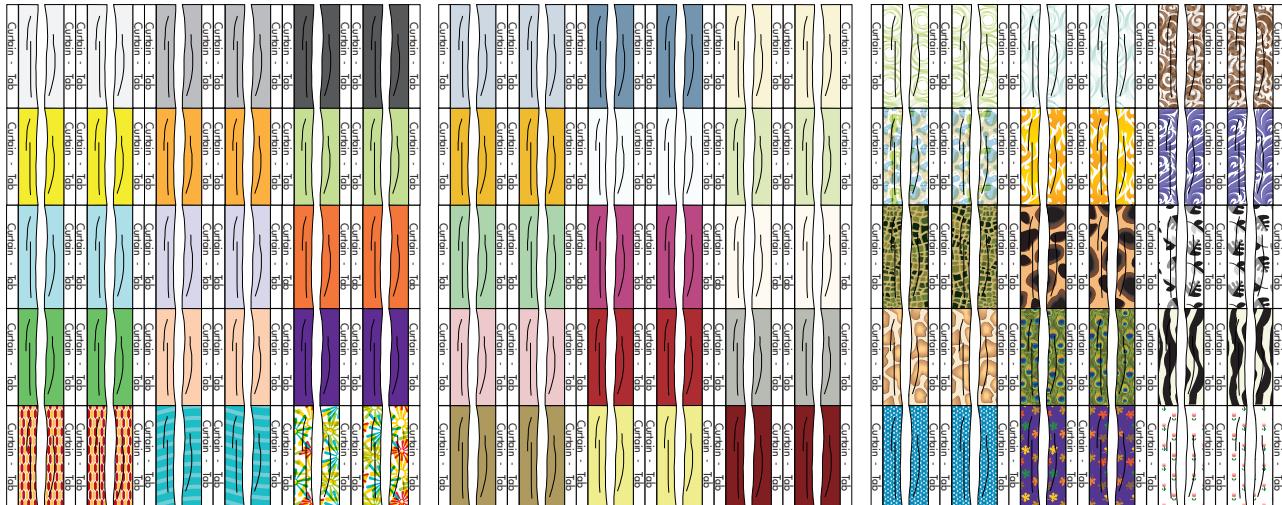


Chimney Pots.

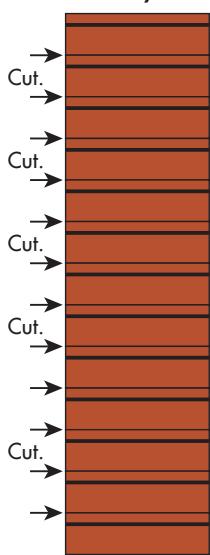


Chimney Pots.

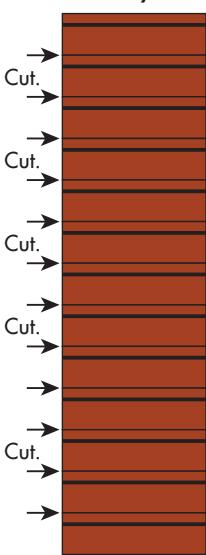


Chimney Pots.

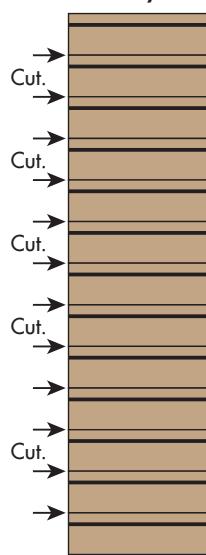

Chimney Pots.

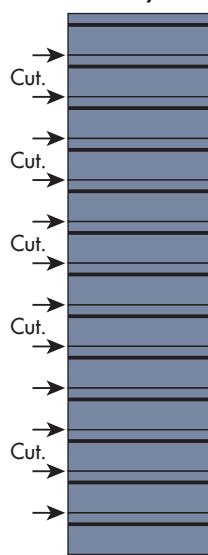


Chimney Pots.

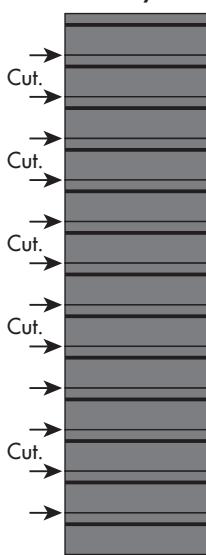

CHIMNEY POTTS

Cut into strips the chimney pots on sheet c, then roll tightly around a nail or screw (apx. 2mm dia.) and fix the end with a tiny spot of glue.

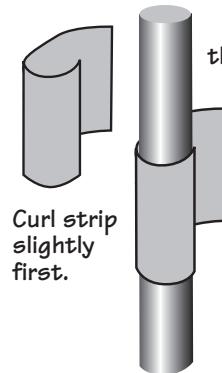

Roll up tight then unroll the end enough to smear with a little glue then roll back up and hold tight until fast.

PLEASE NOTE - once you have perfected the art of rolling your own chimney pots you will soon realise that they are extremely realistic. So please be patient & keep trying, the chimney pots make all the difference.

