


Fig.12. BUILDING 'C' Rear building with passageway.

As with A & B start with the doors
then the glazing making sure any curtains don't get in the
way of the strengtheners (test first).

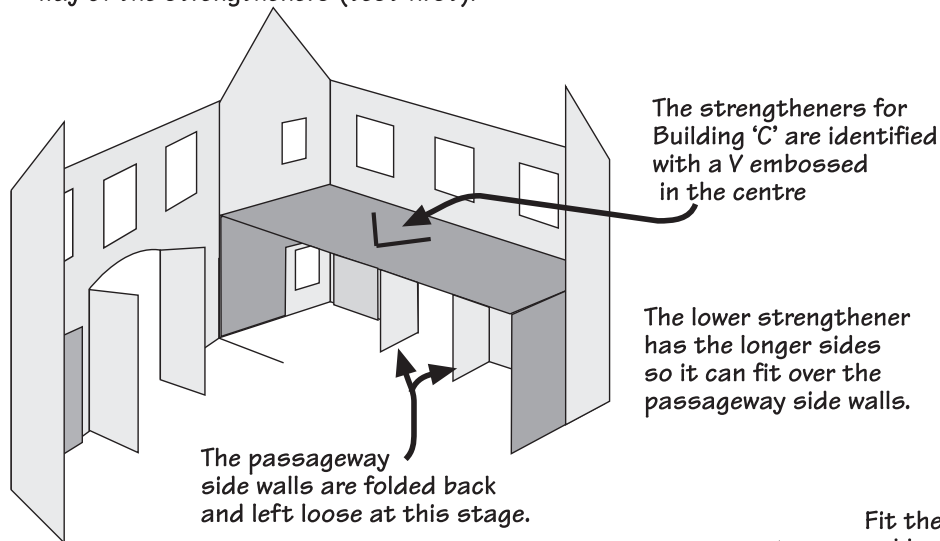


NOTE

The idea of the gable wall braces is that they hold the tops of the outer gable walls vertical. When the roof is fitted they don't bend.

Fig.13. BUILDING 'C'

Fit the passageway inner walls behind the sides that fold back.
The red brick is then visible in the centre bit of the passage walls.

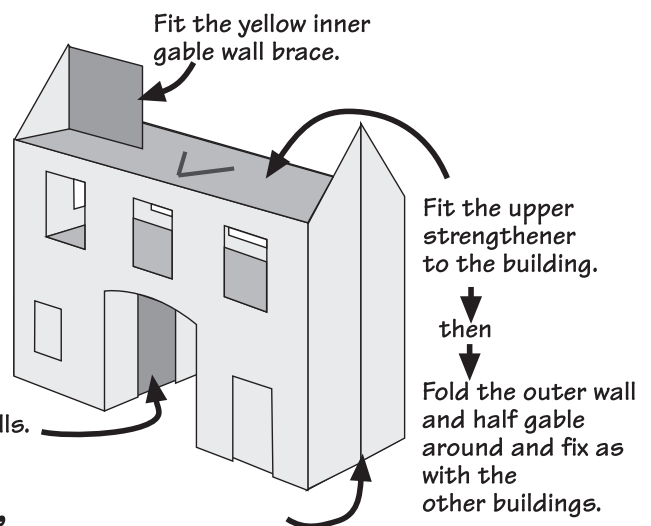

FIT BUILDING 'C' TO BUILDINGS 'A+B'

Fig 14.

Fit building 'C' to the back wall of A & B. There is a nice little slot in the roof for the jointed gable wall to fit in to.

Stand on a flat surface and push the building up against the others hold until fast.


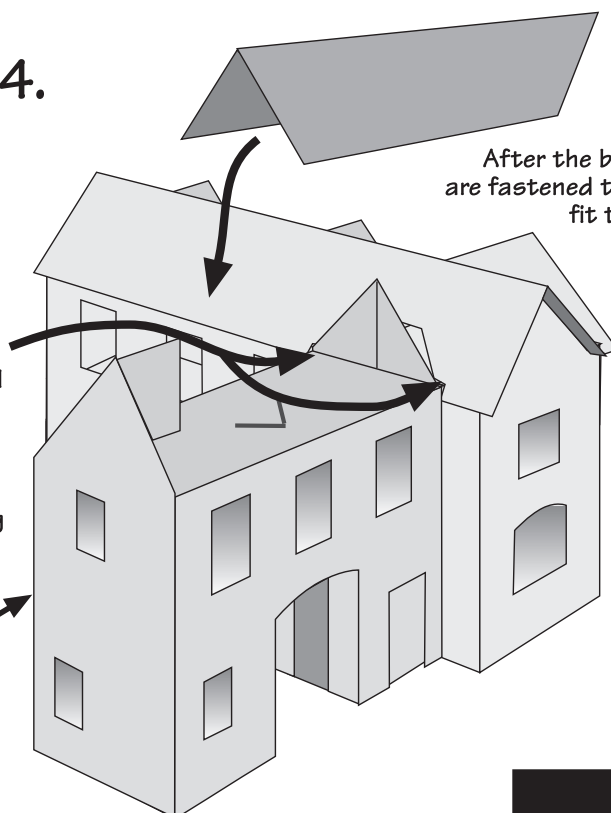


Fig 15. OUTBUILDINGS & YARD WALL.

Fit doors and glazing, fold down the grey inner wall then fold the shed walls around and fix the end to the opposite gable at the point where the yard wall ends.

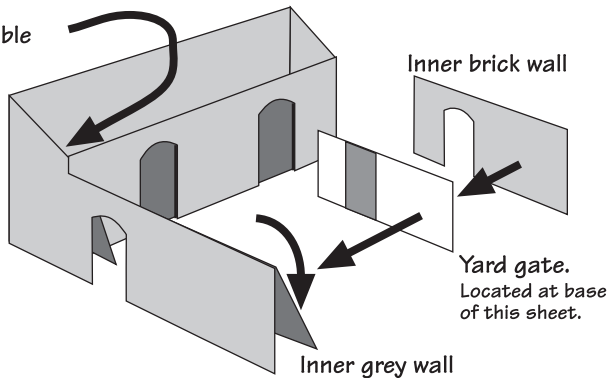


Fold over and fix the inner grey wall then fit the yard gate sandwiched between the inner and outer walls.

Fig 17. BASE CARD

Fix the outbuildings and wall the main building. Stand on a flat surface until fast.

Next, fit the buildings to the base card. Line the cobbles up under the passageway.

Cut and fit the wall top stone strip and the shed roof.

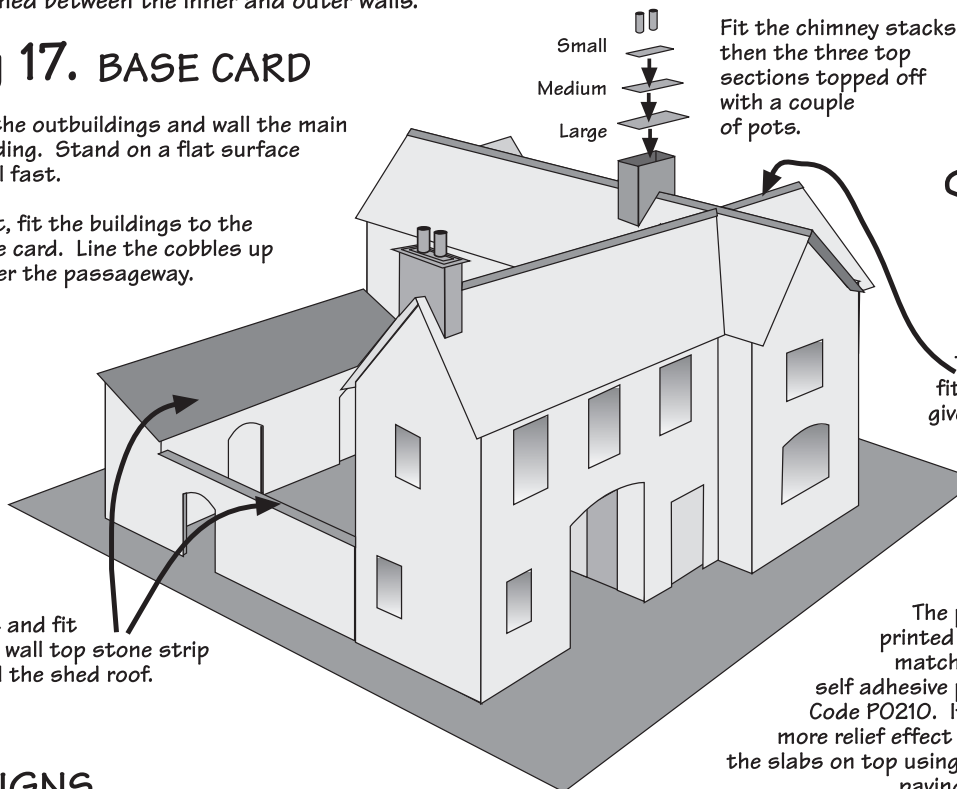

Fit the chimney stacks then the three top sections topped off with a couple of pots.

CHIMNEY STACKS.

Fold sides around and fasten together from inside using chimney brace.


Taking the trouble to fit the ridge tile strips gives the whole building a superb finish.

The paving slabs printed on the base match up with our self adhesive paving slabs Code PO210. If you want a more relief effect simply stick the slabs on top using the printed paving as a guide.

SIGNS.

There is a large selection of name signs for your inn. Three of each in total see photos on box for ideas where to place them.

SIGN & WALL BRACKET.

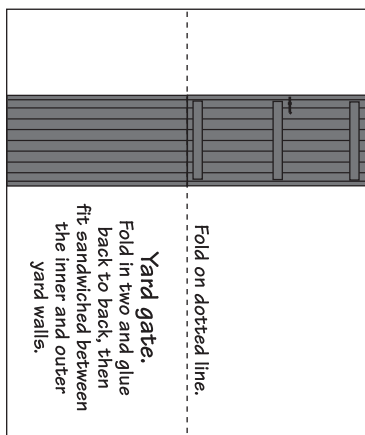

Cut two tiny strips of black paper and stick to the bottom bar so they are sandwiched between the two halves when folded and glued. These act as brackets for the sign.

Fold two halves of wall bracket around and glue.

With a fine brush and black ink paint the edges of the bracket.

Chose the sign you want and fold in half gluing back to back, but fit the straps between the two sides so the sign will hang.

When fast wiggle the sign around for a while and the paper straps will loosen up and become cloth like, allowing the sign to swing freely.

When sign is fast to bracket, put tiny spots of glue on the ends.

Gently hold in place on the wall you want your sign to hang.



Black paper for brackets